

KIRIT INDUSTRIES


AN ISO 9001:2008 COMPANY

SELF PRIMING MONOBLOCK PUMP




Since 1959

TM

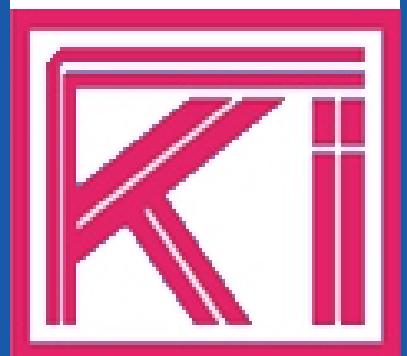

1. GENERAL

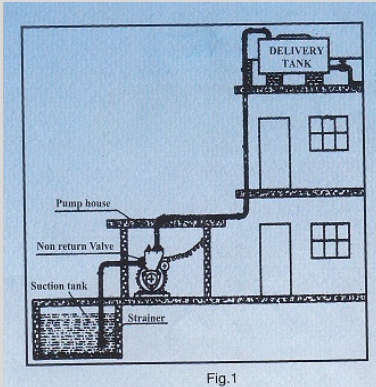

The figure represents the installation of the pump within lightning weight, no special foundation is needed. Just Place the pump on the ground level over a base, or you can hang inside the well.

Though the pumps are self priming at static suction lift upto 8m (26 feet) at mean sea level. please note that the vertical distance between the centre line of suction flange of the pump and water level should "Not" be more than 4.5m (15 feet) for satisfactory discharge. This will also help even if there were further draw down of the water level.

2) **Bends** : Ensures minimum number of bends and airtight joints.

3) **Clearance** : Maintain sufficient clearance of minimum 5 cm (2") between the suction pipe bottom and sides of the tank. In case Pumpset installed on open well then clearance should be minimum 0.5 (1.5") between pipe end, bottom of well and surrounding.

PIPING

1. Use pipe sizes as specified on the name plate.
2. Always Use Anerobic pipe sealent or Teflon Tape for pipe Joints. Avoid use of gunny pieces or jute ropes.
3. No Foot Valve is required for Self Priming Pump.
4. Please take care to fit the special Non Return Valve in the Correct Position.
5. Fix a Strainer at the lower end of suction pipe.
6. Do not remove the Non Return Valve.


PRIMING THE PUMP

This Pump is of the Self Priming type. It is necessary to fill water into the casing once during installation and tighten the filter cap properly. Now start the pumpset and wait about 4 to 5 minutes to get the water initially at max suction lift. During Consecutive operations you will get water immediately after switching on the pump. Switch off the pump before the water level goes below the suction pipe or when there is no water in the pipe line.

OPERATION

1. Wiring: Connect the motor with correct size of cable.
2. Important: Never run the pumpset with gate valve closed, if provided at delivery side. Do not run the pumpset dry to prevent damage to mechanical seal.

TYPICAL OPENWELL INSTALLATION OF MONOBLOCK PUMPS

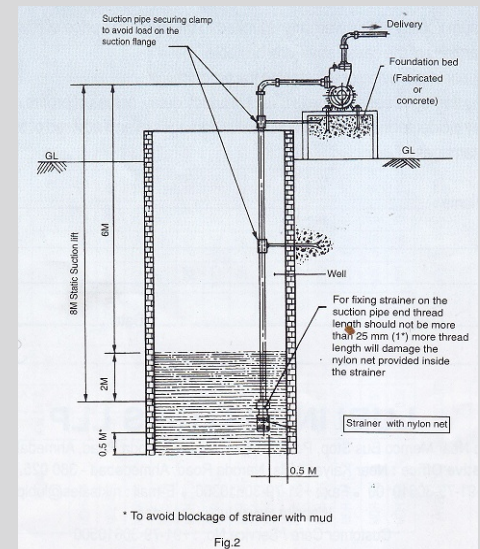

Now your pumpset is ready to deliver water to your requirement.

MAINTENANCE

- 1) **DAILY RUNNING** : It is advisable to run the pumpset for a few minutes daily to maintain freeness.
- 2) **IMPORTANT** : Ensure that the casing is filled adequately with water before starting, if the pumpset is idle for a very long duration.
- 3) **LEAKAGE THROUGH MECHANICAL SEAL:** Replace the mechanical seal if there is excessive leakage through it. The following precautions to be taken while replacing a mechanical seal failure.
- 4) **AIRTIGHT JOINTS:** Check for airtightness of the joints in the suction pipe and casings.
- 5) **STRAINER:** Ensure that the clogging does not take place in strainer. Clean the strainer periodically.

SPARE PARTS FOR SELF PRIMING MONOBLOCK PUMPS

Part No.	Description
1.	Volute Casing
2.	Impeller
3.	Mechanical Seal Unit
4.	Adaptor
5.	Volute Casing Fixing Bolt
6.	Motor Body
7.	Rotor with Shaft
8.	The Rod for Motor Fixing with Hex Nut
9.	Cooling Fan Cover
10.	Terminal Cover

MDH-27DC 0.37 0.50 25*25

Available in aluminium cast iron body.

Note: As the design and manufacture of our products are subject to constant improvement the products supplied may differ in some details from the specifications & illustrations given.

WARRANTY CERTIFICATE

Kirit Industries warrants this product to be free from any defects in material and workmanship under normal use and service for 1 year from the date of purchase by the end user, or 18 months from date of invoice whichever is earlier.

Product that fail during this period will be repaired or replaced at Kirit industries discretion, with the same or a functionally equivalent product that:

- A) The product is returned freight paid to our factory.
- B) A copy of sales invoice indicating the date of sale to the end user is provided.

This warranty does not apply to products that are found by us to be damaged:

- A) During shipment, handling or storage.
- B) Due to improper selection, installation or use.
- C) Due to improper voltage operation of the product.
- D) Due to usage of pump for pumping liquid other than clear cold water (temperature of water not exceeding 45 C)
- E) Due to installation, start up, operation that is not carried out in accordance with this manual or when acceptable code of good practice is not followed.
- F) Due to motor getting exposed to strike of lightning.
- G) Due to pump running dry or being operated with intermittent flow of water.

The maximum liability of this warranty is limited to the purchase price of this product. In no event, regardless of the cause shall kirit industries be liable.

- A) For labour in removing or reinstalling the product.
- B) For any damage caused due to use of product, delay, or loss of profits.
- C) For any incidental indirect or consequential damages even if advised of the possibility of such damages.